YAZOO


REV. OCT. 1991

YAZOO YHRLD21 COMMERCIAL MOWER OWNER'S MANUAL SAFETY SUMMARY

EQUIPMENT DESCRIPTION AND DATA

OPERATING PROCEDURES

TROUBLESHOOTING PROCEDURES

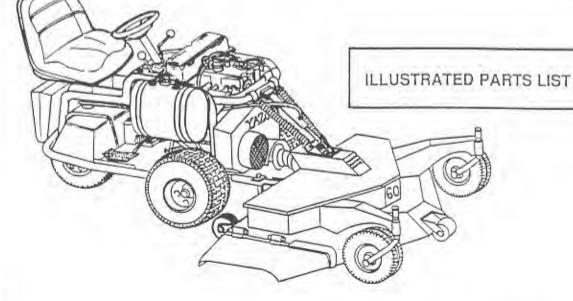



DO NOT OPERATE THIS MOWER WITHOUT THE GRASS CATCHER OR CHUTE GUARD ATTACHED TO THE DISCHARGE OPENING!

0401-110



0401-221



PADIATOR AND SCREEN WILL GET HOT DUBING OPERATION, USE CAUTION WHILE HANDLING RADIATOR OF SCREEN. BEFORE EACH USE AND PRRIODICALLY DURING OPERATION REMOVE AND CLEAN RADIATOR SCREEN.

THROTTLE

OIL PRESSURE

INCLINOMETER

- BRAKE IS SENSITIVE! APPLY PRESSURE WITH SLOW EVEN MOTION. DO NOT PRESS BRAKE WITH QUICK HARD MOTION
- MEARING PROTECTION SHOULD BE WORN.
- **HEVER MOW ON A SURFACE ANGLE GREATER** THAN 15 DEGREES. ALWAYS NOW ACROSS THE FACE ON SLOPES OF 15 DEGREES OR LESS. NEVER UP AND DOWN, DO NOT ATTEMPT SUDDEN STARTS OR STOPS WHEN MOWING ON A SLOPE. AVOID SUDDEN TURNS AND USE EXTREME CAUTION WHEN CHANGING DIRECTIONS ON ANY SLOPE

DANGER

0401-111

CAUTION

A solution of 50% antifreeze and 50% water must be used in this engine.(Freezing point about -34°F) Do not use 100% antifreeze, or severe damage will occur.

19428-87881

CAUTION


Do not use ether or starting fluid. Severe engine damage will occur. 19424:87901

PRECAUTION IN HANDLING RADIATOR

- L. Prior to use, check the water and reglemish it. Dan't Forget This.
- 2. When the overflow pipe starts emitting vapor, theck the water and replenish it.
- 3. When dirt and insacts are trapped in the screen. remove the screen and clean
- 4. Check and clean the Fins periodically. Fins clogged with dirt and mud will increase the consumption of water.
- 5. When the engine is put to continuous use under the brazing sun, inspect the water more often than usual.
- 6 For further details read the Instruction Manual.

WARNING

USE DIESEL FUEL ON. NEVER REFUEL A HOT ENG. E WAIT FIVE (5) MINUTES BEFORE REFUELING.

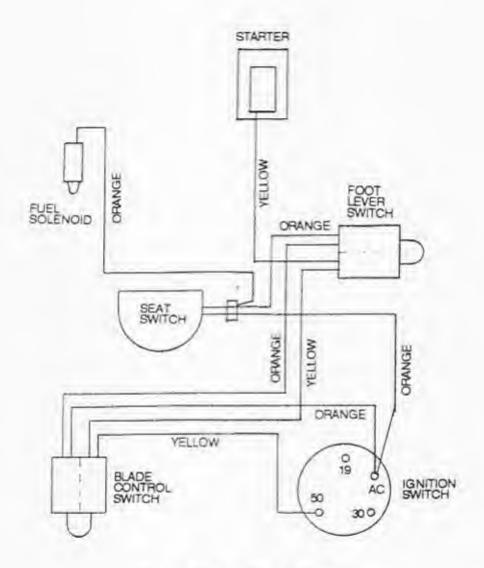

SAFETY SWITCH CIRCUIT

This illustrated parts listing is for the YAZOO YHRLD21 mower manufactured by YAZOO MANUFACTURING COMPANY, P.O. BOX 4449, 3650 BAY STREET, JACKSON, MS 39213.

The purpose of this chapter is to provide a listing, with illustrations, of the parts that comprise, and are necessary for the support of the mower. This section lists the parts as they are assigned to each Figure in the parts listing under the heading "FIGURE KEY NUMBER INDEX". For example, item (KEY) number 34 in Figure 1 will be listed as "1-34" under the "KEY" column along with the part number, name, and quantity (ies) of that item used in that application.

KEY	PART NUMBER	DESCRIPTION	QTY
1-1	1903-022	Seat	1
1-2	1923-029	Switch	1
1.3	0209-114	Bolt, Cap 5/16"-18 x 1"	2
1.4	1916-080	Spring, Seat	1
1-5	2301-008	Washer, Lock 1/2"	2
1.6	0209-480	Bolt, 1/2"-13 x 1"	2
1-7	1401-071	Nut, 5/8" SAE Full	1
1-8	2301-010	Washer, Lock 5/8"	1
1-9	2301-028	Washer	11
1.10	2304-009	Weight	1
1-11	P/O ITEM 1-32	Nut	1
1-12	P/O ITEM 1-32	Washer, Star	1
1-13	0706-002	Gauge, Ammeter	1
1.14	0706-003	Gauge, Hour Meter	1
1-15	0301-145	Throttle Control	1
1-16	1807-006	Rivel, Pop	2
1-17	0230-001	Light Oil Pressure	1
1-18	0214-180	Bracket-Seat Support	1
1-19	P/O ITEM 1-17	Washer, Lock	1
1-20	P/O ITEM 1-17	Nut	1
1-21	0902-001	Inclinometer	1
1-22	P/O ITEM 1-15	Nut	1
1-23		Washer	1
1-24	P/O ITEM 1-14	Nut	1
1-25	P/O ITEM 1-14	Washer	1
1.26	P/O ITEM 1-14	Bracket	1
1-27	P/O ITEM 1-13	Bracket	1
1-28		Washer	2
1-29		Nut	2
1-30		Washer, Lock	2
1-31		Nut, #10 - 32	2
1-32		Switch, Panel	1
1-33		Harness, Wire	1
1-34	1901-018	Screw, 1/4" x 1/2" Self Tapping	1
1-35	P/O ITEM 3-1	Module	1
1-36	2501-054	Yoke Assembly	1

KEY	PART NUMBER	DESCRIPTION	QTY.
1-37	1804-025	Seal, Retainer	2
1-38	0204-075	Bearing, Cone	2
1-39	0312-016	Race, Bearing	2
1-40	0807-022	Hub, Assembly	2
1-41	0312-016	Race, Assembly	2
1-42	0204-075	Bearing, Cone	2
1-43	1604-042	Pin, Cotter	2
1-44	1906-010	Cover, Dust	2 2 2
1-45	1401-096	Nut, Castle	2
1-46	1401-058	Nut, Lug 1/2" NF Tapered	10
1-47	2305-024	Wheel, Assembly	2
1-48	2301-004	Washer, 5/16" Lock	4
1-49	0209-108	Bolt, 5/16" - 19	4
1-50	1201-098	Lever Assy., Blade Eng.	1
1-51	1604-042	Pin, Cotter 1/8" x 1"	1
1-52	1401-001	Nut, 3/16" USS	2
1-53	2301-001	Washer, Lock 3/16"	2
1-54	1401-010	Nut, 1/4" USS	1
1-55	2301-003	Washer, 1/4" Lock	1
1-56	1401-010	Nut, 1/4" USS	3
1-57	2301 003	Washer, 1/4" Lock	3
1-58	0209-049	Bolt, 1/4" x 1" NC	1
1-59	0214-489	Bracket, Switch Eng.	1
1-60	1923-044	Switch, Dbl. Pole	1
1-61	0214-490	Bracket, Blade Switch	1
1-62	2301-001	Washer, Lock 3/16"	2
1-63	1401-001	Nut, 3/16" USS	2
1-64	1901-229	Screw #10-24 x .50 Hex	2
1-65	0204-077	Bearing, Pillow Block	1
1-66	0204-077	Bearing, Pillow Block	1
1-67	1904-288	Steering Shaft Wldt	1
1-68	1102-013	Key, Woodruff	1
1-69	0204-161	Bearing, Upper Steer.	1
1-70	2301-028	Washer, Flat 13/16" I.D. x 1 1/2" O.D.	1
1-71	2301-004	Washer, Lock 5/16"	2
1-72	1401-020	Nut, 5/16" USS	2
1-73	1604-042	Pin, Cotter 1/8" x 1	1
1-74	0208-011	Bolt, #10-24 x 1-3/4"	1
1-75	1604-163	Pin, Roll	1
1-76	1401-099	Nut,#10 - 24 HEX Center Lock	1
1-77	0702-150	Gear, Steer. Pinion	1
1-78	0209-114	Bolt, 5/16"-18 x 1" HH	1
1-79	2301-021	Washer, Flat 5/16"	1
1-80	NOT USED		
1-81	NOT USED		
1-82	NOT USED		
1 83	NOT USED		
1-84	NOT USED		

KEY	PART NUMBER	DESCRIPTION	QTY.
1-85	NOT USED		
1-86	NOT USED		
1-87	NOT USED		
1-88	2301-004	Washer, Lock 5/16"	1
1-89	1401-020	Nut, 5/16" USS	1
1-90	0209 114	Bolt 5/16"-18 x 1" HH	1
1-91	NOT USED	CALL CONTRACTOR OF THE	
1.92	0101-162	Adapter, Tee	1
1-93	0704-015	Guard, Front	1
1-94	0704-008	Guard, Bell	1
1-95	0209-425	Bolt, 7/16" x 1-1/2"	4
1-96	0603-004	Fitting, Grease	1
1-97	1604-086	Pin, Cotter 3/32" x 1/2"	1
1-98	2301-022	Washer, Flat 3/8"	1
1-99	2301-004	Washer, Lock 5/16"	1
1-100	1401-020	Nut. 5/16" USS	1
1-101	0209-320	Bolt, 3/8" x 1-1/2"	1
1-102	2301-021	Washer, Flat 5/16"	1
1-103	0209-114	Bolt, 5/16"-18 x 1" HH	7
1-104	2301-004	Washer, Lock 5/16"	1
1-105	1401-020	Nut. 5/16" USS	1
1-106	1811-025	Grommet, Rubber	1
1-107	1808-284	Rod, Front Engaging	1
1-108	2301-022	Washer, Flat 3/8"	1
1-109	2301-022	Washer, Flat 3/8"	1
1 110	1401-032	Nut, 3/8" SAE NF	1
1-111	2301-031	Washer, Flat 7/16"	4
1-112	2301-007	Washer, Lock 7/16"	4
1-113		Nut, 7/16" NC	4
1-114		End, Rod	1
1-115	2301-006	Washer, Lock 3/8"	1
1-116	1401-030	Nut, 3/8" USS	1
1-117	1401-051	Nut, Lock 1/2" SAE Full	1
1-118	2301-024	Washer, Flat 1/2"	1
1-119	1913-288	Spacer, Steer Gear Pvt.	1
1-120	2301-336	Washer, Thrust	1
1-121	1401-051	Nut, Lock 1/2" SAE Full	1
1-122	2301-024	Washer, Flat 1/2"	1
1-123	1913-287	Spacer, Steer Gear Pvt.	1
1-124	0215-181	Bushing, Steer, Gear	1
1-125	1913-206	Spacer, Rear Weight	1
1-126	1811-028	Grommet, Rubber	1
1-127	0209-519	Bolt 1/2" x 1/2" NF	1
1-128	1401-070	Nut. Jam 5/8" SAE	1
1-129	0502-015	End, Rod	1
1-130	0209-517	Bolt, 1/2" x 2" NF	1
1-131	0209-021	Bolt, 1/4" x 3/4" USS	3
1-132	2301-097	Washer, Thrust	1

ILLUSTRATED PARTS LISTING FIGURE KEY NUMBER INDEX

1-135	KEY	PART NUMBER	DESCRIPTION	QTY.
1-134 2301-097	1-133	0204-078	Bearing, Thrust	1
1-135 0215-101				1
1-139				
1-139				2
1-139				2
1-139				2
1-140 1901-034 Screw, Set 3/8" x 3/4" 1-141 0209-510 Bolt, 1/2-20 x 1-3/4" HH 1-142 0311-097 Steering Arm Wldt. 1-143 1901-034 Screw, Set 3/8" x 3/4" 1-144 2301-008 Washer, Lock 1/2" 1-145 0502-018 End, Rod 1-147 1401-051 Nut, Lock 1/2" SAE NF 1-148 1401-054 Nut, Full 1/2" NF 1-150 1401-054 Nut, Full 1/2" NF 1-151 0502-018 End, Rod 1-152 0209-519 Bolt, 1/2" x 1-1/2" NF 1-153 2301-008 Washer, Lock 1/2" 1-154 1401-051 Nut, Lock 1/2" NF 1-155 1901-041 Screw, Self-tap 1-156 2303-012 Steering Wheel 1-157 2301-096 Washer, Spring 5/8" 1-158 1401-050 Nut, Jam 1/2" SAE NF 1-159 0806-229 Housing, Steer Shaft 1-160 0209-108 Bolt, 5/16"-18 x 3/4" 1-161 0605-463 Frame 1-162 0209-045 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-165 1401-020 Nut, 5/16" X 1-3/4" 1-166 2301-004 Washer, Lock 5/16" 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 1-171 1204-006 Link, Lift Valve 1-172 1201-099 Lever, Washer, Lock 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				1
1-141 0209-510 Bolt, 1/2-20 x 1-3/4" HH 1-142 0311-097 Steering Arm Widt. 1-143 1901-034 Screw, Set 3/8" x 3/4" 1-144 2301-008 Washer, Lock 1/2" 1-145 0502-018 End, Rod 1-146 2301-008 Washer, Lock 1/2" 1-148 1401-051 Nut, Lock 1/2" NF 1-149 1808-299 Rod, Steering Link 1-150 1401-054 Nut, Full 1/2" NF 1-151 0502-018 End, Rod 1-152 0209-519 Bolt, 1/2" x 1-1/2" NF 1-153 2301-008 Washer, Lock 1/2" 1-154 1401-051 Nut, Lock 1/2" SAE NF 1-155 1901-041 Screw, Self-tap 1-156 2303-012 Steering Wheel 1-157 2301-096 Washer, Spring 5/8" 1-158 1401-050 Nut, Jam 1/2" SAE NF 1-159 0806-229 Housing, Steer Shaft 1-160 0209-108 Bolt, 5/16"-18 x 3/4" 1-161 0605-463 Frame 1-162 0209-108 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 5/16" USS 1-165 1401-020 Nut, 5/16" Washer, Lock 5/16" 1-170 1604-162 Pin, Clevis, 3/16" x 1-1/2" US 1-171 1204-006 Link, Lift Valve 1-172 1201-099 Lever, Wild Valve 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				1
1-142				1
1-143				1
1-144 2301-008				1
1-145 0502-018 End, Rod 1-146 2301-008 Washer, Lock 1/2" 1-147 1401-051 Nut, Lock 1/2" SAE NF 1-148 1401-054 Nut, Full 1/2" NF 1-149 1808-299 Rod, Steering Link 1-150 1401-054 Nut, Full 1/2" NF 1-151 0502-018 End, Rod 1-152 0209-519 Bolt, 1/2" X 1-1/2" NF 1-153 2301-008 Washer, Lock 1/2" 1-154 1401-051 Nut, Lock 1/2" SAE NF 1-155 1901-041 Screw, Self-tap 1-156 2303-012 Steering Wheel 1-157 2301-096 Washer, Spring 5/8" 1-158 1401-050 Nut, Jam 1/2" SAE NF 1-159 0806-229 Housing, Steer Shaft 1-160 0209-108 Bolt, 5/16"-18 x 3/4" 1-161 0605-463 Frame 1-162 0209-108 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-168 0214-491 Brkt, Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-171 1204-006 Link, Lift Valve 1-173 2301-021 Washer, 5/16" Lisk 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				1
1-146 2301-008 Washer, Lock 1/2" SAE NF 1-148 1401-051 Nut, Lock 1/2" SAE NF 1-149 1808-299 Rod, Steering Link 1-150 1401-054 Nut, Full 1/2" NF 1-151 0502-018 End, Rod 1-152 0209-519 Bolt, 1/2" x 1-1/2" NF 1-153 2301-008 Washer, Lock 1/2" 1-154 1401-051 Nut, Lock 1/2" SAE NF 1-155 1901-041 Screw, Self-tap 1-156 2303-012 Steering Wheel 1-157 2301-096 Washer, Spring 5/8" 1-158 1401-050 Nut, Jam 1/2" SAE NF 1-159 0806-229 Housing, Steer Shaft 1-160 0209-108 Bolt, 5/16"-18 x 3/4" 1-161 0605-463 Frame 1-162 0209-045 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 5/16"-18 x 3/4" 1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 1-171 1204-006 Link, Lift Valve 1-173 2301-021 Washer, 5/16" Flat 1-175 1401-020 Nut, 5/16" Flat 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"	1-145	0502-018		1
1-147 1401-051 Nut, Lock 1/2" SAE NF 1-148 1401-054 Nut, Full 1/2" NF 1-149 1808-299 Rod, Steering Link 1-151 0502-018 End, Rod 1-152 0209-519 Bolt, 1/2" x 1-1/2" NF 1-153 2301-008 Washer, Lock 1/2" 1-154 1401-051 Nut, Lock 1/2" SAE NF 1-155 1901-041 Screw, Self-tap 1-156 2303-012 Steering Wheel 1-157 2301-096 Washer, Spring 5/8" 1-158 1401-050 Nut, Jam 1/2" SAE NF 1-159 0806-229 Housing, Steer Shaft 1-160 0209-108 Bolt, 5/16"-18 x 3/4" 1-161 0605-463 Frame 1-162 0209-108 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 1/4"-20 x 1-3/4" 1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-167 0209-126 Bolt, 5/16" X 1-1/2" US 1-168 0214-491 Brkt., Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-171 1204-006 Link, Lift Valve 1-173 2301-021 Washer, 5/16" Flat 1-174 2201-009 Lever, Widt Valve 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"	1-146	2301-008		1
1-148 1401-054 Nut, Full 1/2" NF Rod, Steering Link 1-150 1401-054 Nut, Full 1/2" NF 1-151 0502-018 End, Rod End, Rod 1-152 0209-519 Bolt, 1/2" x 1-1/2" NF 1-153 2301-008 Washer, Lock 1/2" Nut, Lock 1/2" SAE NF 1-154 1401-051 Nut, Lock 1/2" SAE NF 1-156 2303-012 Steering Wheel 1-156 2303-012 Steering Wheel 1-157 2301-096 Washer, Spring 5/8" Nut, Jam 1/2" SAE NF 1-158 1401-050 Nut, Jam 1/2" SAE NF 1-160 0209-108 Bolt, 5/16"-18 x 3/4" 2-160 0209-108 Bolt, 5/16"-18 x 3/4" 2-160 0209-108 Bolt, 5/16"-18 x 3/4" 2-161 0605-463 Frame 1-162 0209-108 Bolt, 5/16"-18 x 3/4" 2-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 1/4"-20 x 1-3/4" 2-165 1401-020 Nut, 5/16" USS 2-166 2301-004 Washer, Lock 5/16" 2-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-169 1913-286 Spacer, Lever Pivot 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 2-177 1204-006 Link, Lift Valve 1-173 2301-021 Washer, Lock 5/16" 1-175 1401-020 Nut, 5/16" USS 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				1
1-149 1808-299				4
1-150				1
1-151 0502-018 End, Rod 1-152 0209-519 Bolt, 1/2" x 1-1/2" NF 1-153 2301-008 Washer, Lock 1/2"				1
1-152 0209-519 Bolt, 1/2" x 1-1/2" NF 1-153 2301-008 Washer, Lock 1/2" 1-154 1401-051 Nut, Lock 1/2" SAE NF 1-155 1901-041 Screw, Self-tap 1-156 2303-012 Steering Wheel 1-157 2301-096 Washer, Spring 5/8" 1-158 1401-050 Nut, Jam 1/2" SAE NF 1-159 0806-229 Housing, Steer Shaft 1-160 0209-108 Bolt, 5/16"-18 x 3/4" 1-161 0605-463 Frame 1-162 0209-108 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 1/4"-20 x 1-3/4" 1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-168 0214-491 Brkt., Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 1-171 1204-006 Link, Lift Valve 1-173 2301-004 Washer, Lock 5/16" Spacer, Widt Valve 1-173 2301-004 Washer, Lock 5/16" Spacer, Lever, Widt Valve 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				4
1-153 2301-008 Washer, Lock 1/2" 1-154 1401-051 Nut, Lock 1/2" SAE NF 1-155 1901-041 Screw, Self-tap 1-156 2303-012 Steering Wheel 1-157 2301-096 Washer, Spring 5/8" 1-158 1401-050 Nut, Jam 1/2" SAE NF 1-159 0806-229 Housing, Steer Shaft 1-160 0209-108 Bolt, 5/16"-18 x 3/4" 1-161 0605-463 Frame 1-162 0209-108 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 1/4"-20 x 1-3/4" 1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-168 0214-491 Brkt., Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 1-171 1204-006 Link, Lift Valve 1-173 2301-021 Washer, Lock 5/16" 1-174 2301-004 Washer, Lock 5/16" 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				4
1-154 1401-051 Nut, Lock 1/2" SAE NF 1-155 1901-041 Screw, Self-tap 1-156 2303-012 Steering Wheel 1-157 2301-096 Washer, Spring 5/8" 1-158 1401-050 Nut, Jam 1/2" SAE NF 1-159 0806-229 Housing, Steer Shaft 1-160 0209-108 Bolt, 5/16"-18 x 3/4" 1-161 0605-463 Frame 1-162 0209-108 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 1/4"-20 x 1-3/4" 1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-168 0214-491 Brkt., Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 1-171 1204-006 Link, Lift Valve 1-173 2301-021 Washer, 5/16" Flat 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				4
1-155				1
1-156 2303-012 Steering Wheel 1-156A P/O ITEM 1-156 Cover, Steering 1-157 2301-096 Washer, Spring 5/8" 1-158 1401-050 Nut, Jam 1/2" SAE NF 1-159 0806-229 Housing, Steer Shaft 1-160 0209-108 Bolt, 5/16"-18 x 3/4" 1-161 0605-463 Frame 1-162 0209-108 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 1/4"-20 x 1-3/4" 1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-168 0214-491 Brkt., Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 1-171 1204-006 Link, Lift Valve 1-172 1201-099 Lever, Widt Valve 1-173 2301-021 Washer, 5/16" Flat 1-174 2301-004 Washer, Lock 5/16" 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				2
1-156A P/O ITEM 1-156 Cover, Steering 1-157 2301-096 Washer, Spring 5/8" 1-158 1401-050 Nut, Jam 1/2" SAE NF 1-159 0806-229 Housing, Steer Shaft 1-160 0209-108 Bolt, 5/16"-18 x 3/4" 1-161 0605-463 Frame 1-162 0209-108 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 1/4"-20 x 1-3/4" 1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-168 0214-491 Brkt., Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 1-171 1204-006 Link, Lift Valve 1-173 2301-021 Washer, 5/16" Flat 1-174 2301-004 Washer, Lock 5/16" 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				1
1-157 2301-096 Washer, Spring 5/8" 1-158 1401-050 Nut, Jam 1/2" SAE NF 1-159 0806-229 Housing, Steer Shaft 1-160 0209-108 Bolt, 5/16"-18 x 3/4" 1-161 0605-463 Frame 1-162 0209-108 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 1/4"-20 x 1-3/4" 1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-168 0214-491 Brkt., Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 1-171 1204-006 Link, Lift Valve 1-172 1201-099 Lever, Wldt Valve 1-173 2301-021 Washer, 5/16" Flat 1-174 2301-004 Washer, Lock 5/16" 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				1
1-158				1
1-159				1
1-160 0209-108 Bolt, 5/16"-18 x 3/4" 1-161 0605-463 Frame 1-162 0209-108 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 1/4"-20 x 1-3/4" 1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-168 0214-491 Brkt., Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 1-171 1204-006 Link, Lift Valve 1-172 1201-099 Lever, Widt Valve 1-173 2301-021 Washer, 5/16" Flat 1-174 2301-004 Washer, Lock 5/16" 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 1-177 1604-092 Pin, Cotter 1/16" x 1"				1
1-161 0605-463 Frame 1-162 0209-108 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 1/4"-20 x 1-3/4" 1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-168 0214-491 Brkt., Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 1-171 1204-006 Link, Lift Valve 1-172 1201-099 Lever, Wldt Valve 1-173 2301-021 Washer, 5/16" Flat 1-174 2301-004 Washer, Lock 5/16" 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				2
1-162 0209-108 Bolt, 5/16"-18 x 3/4" 1-163 1104-012 Knob, 3/8"-16 Thd. 1-164 0209-045 Bolt, 1/4"-20 x 1-3/4" 1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-168 0214-491 Brkt., Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 1-171 1204-006 Link, Lift Valve 1-172 1201-099 Lever, Wldt Valve 1-173 2301-021 Washer, 5/16" Flat 1-174 2301-004 Washer, Lock 5/16" 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				1
1-163	1-162	0209-108		2
1-164 0209-045 Bolt, 1/4"-20 x 1-3/4" 1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-168 0214-491 Brkt., Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 1-171 1204-006 Link, Lift Valve 1-172 1201-099 Lever, Wldt Valve 1-173 2301-021 Washer, 5/16" Flat 1-174 2301-004 Washer, Lock 5/16" 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				1
1-165 1401-020 Nut, 5/16" USS 1-166 2301-004 Washer, Lock 5/16" 21-167 0209-126 Bolt, 5/16" x 1-1/2" US 1-168 0214-491 Brkt., Valve Mount 1-169 1913-286 Spacer, Lever Pivot 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 21-171 1204-006 Link, Lift Valve 1-172 1201-099 Lever, Wldt Valve 1-173 2301-021 Washer, 5/16" Flat 1-174 2301-004 Washer, Lock 5/16" 1-175 1401-020 Nut, 5/16" USS 1-176 1204-006 Link, Lift Valve 1-177 1604-092 Pin, Cotter 1/16" x 1"				2
1-166 2301-004 Washer, Lock 5/16" 2 1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1 1-168 0214-491 Brkt., Valve Mount 1 1-169 1913-286 Spacer, Lever Pivot 1 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 2 1-171 1204-006 Link, Lift Valve 1 1-172 1201-099 Lever, Wldt Valve 1 1-173 2301-021 Washer, 5/16" Flat 1 1-174 2301-004 Washer, Lock 5/16" 1 1-175 1401-020 Nut, 5/16" USS 1 1-176 1204-006 Link, Lift Valve 1 1-177 1604-092 Pin, Cotter 1/16" x 1" 2				2
1-167 0209-126 Bolt, 5/16" x 1-1/2" US 1 1-168 0214-491 Brkt., Valve Mount 1 1-169 1913-286 Spacer, Lever Pivot 1 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 2 1-171 1204-006 Link, Lift Valve 1 1-172 1201-099 Lever, Wldt Valve 1 1-173 2301-021 Washer, 5/16" Flat 1 1-174 2301-004 Washer, Lock 5/16" 1 1-175 1401-020 Nut, 5/16" USS 1 1-176 1204-006 Link, Lift Valve 1 1-177 1604-092 Pin, Cotter 1/16" x 1" 2	1-166	2301-004		2
1-169 1913-286 Spacer, Lever Pivot 1 1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 2 1-171 1204-006 Link, Lift Valve 1 1-172 1201-099 Lever, Wldt Valve 1 1-173 2301-021 Washer, 5/16" Flat 1 1-174 2301-004 Washer, Lock 5/16" 1 1-175 1401-020 Nut, 5/16" USS 1 1-176 1204-006 Link, Lift Valve 1 1-177 1604-092 Pin, Cotter 1/16" x 1" 2	1-167	0209-126		1
1-170 1604-162 Pin, Clevis, 3/16" x 13/16" 2 1-171 1204-006 Link, Lift Valve 1 1-172 1201-099 Lever, Wldt Valve 1 1-173 2301-021 Washer, 5/16" Flat 1 1-174 2301-004 Washer, Lock 5/16" 1 1-175 1401-020 Nut, 5/16" USS 1 1-176 1204-006 Link, Lift Valve 1 1-177 1604-092 Pin, Cotter 1/16" x 1"	1-168	0214-491	Brkt., Valve Mount	1
1-171 1204-006 Link, Lift Valve 1 1-172 1201-099 Lever, Wldt Valve 1 1-173 2301-021 Washer, 5/16" Flat 1 1-174 2301-004 Washer, Lock 5/16" 1 1-175 1401-020 Nut, 5/16" USS 1 1-176 1204-006 Link, Lift Valve 1 1-177 1604-092 Pin, Cotter 1/16" x 1"	1-169	1913-286	Spacer, Lever Pivot	1
1-171 1204-006 Link, Lift Valve 1 1-172 1201-099 Lever, Wldt Valve 1 1-173 2301-021 Washer, 5/16" Flat 1 1-174 2301-004 Washer, Lock 5/16" 1 1-175 1401-020 Nut, 5/16" USS 1 1-176 1204-006 Link, Lift Valve 1 1-177 1604-092 Pin, Cotter 1/16" x 1"	1-170	1604-162	Pin, Clevis, 3/16" x 13/16"	2
1-172 1201-099 Lever, Wldt Valve 1 1-173 2301-021 Washer, 5/16" Flat 1 1-174 2301-004 Washer, Lock 5/16" 1 1-175 1401-020 Nut, 5/16" USS 1 1-176 1204-006 Link, Lift Valve 1 1-177 1604-092 Pin, Cotter 1/16" x 1" 2		1204-006		1
1-173 2301-021 Washer, 5/16" Flat 1 1-174 2301-004 Washer, Lock 5/16" 1 1-175 1401-020 Nut, 5/16" USS 1 1-176 1204-006 Link, Lift Valve 1 1-177 1604-092 Pin, Cotter 1/16" x 1" 2		1201-099		1
1-174 2301-004 Washer, Lock 5/16" 1 1-175 1401-020 Nut, 5/16" USS 1 1-176 1204-006 Link, Lift Valve 1 1-177 1604-092 Pin, Cotter 1/16" x 1" 2	1-173	2301-021	Washer, 5/16" Flat	1
1-175 1401-020 Nut, 5/16" USS 1 1-176 1204-006 Link, Lift Valve 1 1-177 1604-092 Pin, Cotter 1/16" x 1" 2	1-174	2301-004		1
1-177 1604-092 Pin, Cotter 1/16" x 1"	1-175	1401-020		1
	1-176	1204-006	Link, Lift Valve	1
		1604-092		2
	1-178			1
1-179 0812-050 Hose 1	1-179	0812-050	Hose	1

FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY.
1-180	0101-117	Adaptor	1
1-181	0812-072	Hose, Lift Cyl. 45"	1
1-182	1401-009	Nut, 1/4" Lock	2
1-183	2201-037	Cylinder Actuator	2
1-184	0101-159	Adaptor, 90 Degree	1
1-185	0812-050	Hose	1
1-186	0101-159	Adaptor	1
1-187	0812-050	Hose	1
1-188	1604-002	Pin, Cotter 3/32" x 1"	1.
1-189	0214-274	Brkt., Lift Cylinder	1.
1.190	1604-063	Pin	1.
1-191	1604-063	Pin	1
1.192	1604-002	Pin, Cotter 3/32" x 1"	1
1 193	0101-116	Adaptor	1
1-194	0319-002	Cylinder	1
1-195	0101-118	Adaptor	1
1-196	0101-118	Adaptor	1
1-197	0215-182	Bushing, Steering	1
1-198	NOT USED		
1-199	NOT USED		
1-200	1102-002	Key, 1/4" x 1/4" x 1"	1
1-201	0702-149	Gear, Widt Steering	4
1-202	2301-031	Washer, 7/16" Flat	1
1-203	2301-031	Washer, 7/16" Flat	1
1-204	2301-008	Washer, 1/2" Lock	1

KEY	PART NUMBER	DESCRIPTION	QTY
2-1	1602-011	Pedal	1
2.2	1601-001	Pad	1
2-3	1604-086	Pin, Cotter 3/32" x 1/2"	1
2-4	0209-114	Bolt, 5/16"-18 x 1" HH	1
2-5	0214-153	Bracket, Brake Pedal	1
2-6	2301-004	Washer, Lock 5/16"	1
2-7	1401-020	Nut, 5/16" USS	1
2-8	2301-022	Washer, Flat 3/8"	1
2.9	1401-021	Nut, Lock 5/16" USS	1
2-10	0603-004	Fitting, Grease	1
2.11	1604-002	Pin, Cotter 3/32" x 1"	1
2-12	0209-114	Bolt, 5/16"-18 x 1" HH	1
2-13	0501-019	Elbow, Drain Assembly	1
2-14	1606-038	Plug, Square 3/8"	1
2-15	0812-039	Hose, Oil Drain	1
2.16	1401-020	Nut, 5/16" USS	1
2-17	2301-004	Washer, Lock 5/16"	1
2-18	1604-061	Pin, Clevis	1
2-19	2501-030	Yoke	1

KEY	PART NUMBER	DESCRIPTION	QTY
2-20	1401-030	Nut, 3/8" USS	1
2-21	1808-300	Rod, Blade Engaging	1
2-22	2301-004	Washer, Lock 5/16"	1
2-23	1401-020	Nut. 5/16" USS	1
2-24	0101-113	Bushing, Pipe	1
2.25	1808-200	Rod, Brake Hydro	2
2-26	2301-021	Washer, Flat 5/16"	2 2
2-27	1604-086	Pin, Cotter 3/32" x 1/2"	2
2-28		Kit, Brake Drum	2
2-29	2305-022	Wheel, Assembly	2
2-30	1401-061	Nut, Tapered 1/2"	10
2-31	1805-026	Rim, Beaded Front	2
2-32	2003-067	Tire, 16 x 6.5	2
2-33	1604-086	Pin, Cotter 3/32" x 1/2"	2
2-34	2301-021	Washer, Flat 5/16"	2
2.35	2501-027	Yoke	2
2.36	1604-013	Pin, 5/16" x 1-1/4" Roll	2222
2-37	0209-350	Bolt, 3/8" x 2-1/2" NC HH	4
2-38	1401-020	Nut. 5/16" USS	2
2-39	2301-004	Washer, Lock 5/16"	2 2
2-40	0704-367	Guard, Oil Filter	1
2-41	1604-086	Pin, Cotter 3/32" x 1/2"	4
2-42	2301-021	Washer, Flat 5/16"	1
2-43	2301-006	Washer, Lock 3/8"	4
2-44	1401-030	Nut, 3/8" USS	4
2-45	1401-069	Nut, Jam 5/8"	2 2 2
2-46	2301-011	Washer, Star	2
2-47	0209-617	Bolt	2
2-48	1916-116	Spring	1
2-49	0212-003	Bolt. Eye 3/16" x 2"	1
2.50	1401-099	Nut. #10 - 24 Center Lock	1
2-51	0102-152	Arm, Engaging Assembly	1
2.52	0204-019	Bearing, Hub 5/8" ID	7
2.53	1608-148	Pulley, Engine Idler	1
2.54	0204-019	Bearing, Hub 5/8" ID	1
2-55	1401-070	Nut. 5/8" - 18 Half Center Lock	1
2-56	1401-030	Nut, 3/8" USS	1
2-57	1604-103	Pin, Brake Band	1
2-58	0205-538	Belt, Drive	1
2-59	0205-538	Belt, Drive	1
2-60	0215-175	Bushing	1
2-61	1102-058	Key, 1/4" x 1/4" x 4"	7
2-62	0209-021	Bolt, 1/4" x 3/4" USS	4
2-63	1608-119	Pulley, PTO	1
2-64	1901-136	Screw, Set 5/16" x 1"	1
2-65	0205-534	Belt, Pump	1
2-66	1901-136	Screw, Set 5/16" x 1"	3
2-67	1604-086	Pin, Cotter 3/32" x 1/2"	1

KEY	PART NUMBER	DESCRIPTION	QTY
			۵.,
2-68	0217 020	Brake, Band	1
2-69	1604-086	Pin, cotter 3/32" x 1/2"	1
2-70	1806-008	Ring, Snap	1
2-71	0214-276	Bracket, Brake Band	1
2-72	1904-191	Shaft, Pulley PTO	1
2-73	1401-032	Nut, 3/8" SAE	1
2 74	1916-174	Spring	1
40.0	1401-070	Nut, 5/8" - 18 Half Center Lock	1
2.76	0603-004	Fitting, Grease	1
2-77	0209-341	Bolt, 3/8" x 2" NF	1
2-78	1401-051	Nut, Lock Full 1/2" NF	1
2-79	0209-108	Bolt, 5/16" x 3/4" USS	1
2-80	1608-365	Pulley, Plastic Idler	1
2-81	0209-517	Bolt, 1/2" x 2" NF	1
2-82	2301-334	Washer	1
2 83	1401-070	Nut, Jam 5/8"	1
2-84	1913 040	Spacer	2
2 85	1913-040	Spacer	6
2-86	0215-177	Bushing	-1
2 87	0102-133	Arm, Idler Assembly	1
2.88	1913-040	Spacer	4
2-89	1916-161	Spring	1
2.90	1401-020	Nut, 5/16" USS	1
2.91	1604-086	Pin, Cotter 3/32" x 1/2"	. 1
2-92	1916 177	Spring, Small	1
2-93	1604-160	Pin, Roll 16 MM x 35 MM	1
2-94	0209-049	Bolt, 1/4" x 1"	1
2-95	23(11-020	Washer, Flat 1/4"	1
2.96	0214-467	Bracket, Actuator	1
2-97	1806-008	Ring, Snap	1
2-98	0214 453	Brkt., Neutral Retainer	1
2-99	0214 453	Brkt., Neutral Retainer	1
2-100	0102 135	Arm, Forward/Reverse	1
2-101	1401 099	Nut, Lock 3/16" 24	1
2-102	2301-001	Washer, Lock 3/16"	1
2-103	2301-003	Washer, Lock 1/4"	1
2-104	1401-010	Nut, 1/4" USS	1
2-105	1401-030	Nut, 3/8" USS	1
2-106	0209-049	Bolt, 1/4"-20 x 1.00	1
2.107	0102-149	Arm, Bypass Valve	1
2-108	1401-010	Nut, 1/4"-20	1
2-109	1401-001	Nut, #10-24	1
2-110	2301-001	Washer, Lock 3/16"	1
2-111	2301-005	Washer, Start 5/16"	1
2-112	1401-010	Nut, 1/4"-20	1
2-113	0307-004	Clamp, Cable	1
2-114	1901-229	Screw, #10-24 x 1/2"	1
	44.60	Chicago and and an article	

2-115 0209-021 Bolt, 1/4" x 3/4" USS 2 2-116 2301-003 Washer, Lock 1/4" 2 2-117 2301-020 Washer, Flat 1/4" 2 2-118 0612-006 Fan, Blower (Eaton) 1 2-119 1901-006 Screw, Set 5/16" x 1" 1 2-120 1608-407 Pulley, Transmission 1 2-121 1102-059 Key, 5MM x 1.250 1 2-122 2301-020 Washer, Flat 1/4" 2 2-123 3009-161 Bolt, 5/16" x 3" 2 2-124 0209-831 Bolt, 5/16" x 5" 2 2-125 2301-020 Washer, Flat 1/4" 2 2-125 2301-020 Washer, Flat 1/4" 2 2-126 2006-077 Trans, BDU21L-310 1 2-127 1902-073 O-ring 1 2-128 2006-078 Assy., Transaxle 1 2-130 0215-183 Bushing, Std Pipe Thread 1 2-131 1606-069 Plug 1 2-132 0315-012 Cup, Oil Breather 1 2-133 0209-834 Bolt 1 2-134 2301-296 Washer, Flat 3/16" 1 2-135 0101-154 Fitting, Hose 1 2-136 1806-145 O-ring 1 2-137 0307-039 Clamp, Hose 1 2-138 0812-067 Hose 1 2-139 0307-039 Clamp, Hose 1 2-140 1011-153 Fitting, Hose 1 2-141 0101-155 Adaptor 1 2-142 0610-018 Filter, Trans, Oil 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-020 Nut, 3/8" SAE 1 2-145 1401-021 Nut, 1-26 Hose 1 2-146 1401-020 Nut, 3/8" SAE 1 2-151 1401-032 Nut, 3/8" SAE 1 2-151 1401-032 Nut, 3/8" SAE 1 2-155 1401-030 Nut, 3/8" SAE 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 3/8" SAE 1 2-158 0209-114 Bolt, 3/8" USS 1 2-157 1401-020 Nut, 3/8" SAE 1 2-158 0209-117 Pad, Hydro Pedal 1 2-159 1-150 0209-181 Bolt, 5/16" USS 1 2-151 1401-032 Nut, 3/8" SAE 1 2-151 1401-032 Nut, 3/8" SAE 1 2-151 1401-032 Nut, 3/8" SAE 1 2-155 1401-030 Nut, 3/8" SAE 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-159 1916-175 Spring 1 2-160 1901-229 Screw 2	KEY	PART NUMBER	DESCRIPTION	QTY
2-119 1901-006	2-115	0209-021	Bolt, 1/4" x 3/4" USS	2
2-119 1901-006		2301-003	Washer, Lock 1/4"	2
2-119 1901-006	2-117	2301-020		2
2-119 1901-006	2-118			1
2-120 1608-407	2-119			1
2-121 1102-059				11
2-122 2301-020				1
2-124 0209-831 Bott, 5/16" x 5-1/4" 2 2-125 2301-020 Washer, Flat 1/4" 2 2-126 2006-077 Trans., BDU21L-310 1 2-127 1902-073 O-ring 1 2-128 2006-078 Assy., Transaxie 1 2-129 1601-004 Pad, Foot 6" x 12" 1 2-130 0215-183 Bushing, Std Pipe Thread 1 2-131 1606-069 Plug 1 2-132 0315-012 Cup, Oil Breather 1 2-133 0209-834 Boll 1 2-134 2301-296 Washer, Flat 3/16" 1 2-135 0101-154 Fitting, Hose 1 2-136 1806-145 O-ring 1 2-137 0307-039 Clamp, Hose 1 2-138 0812-067 Hose 1 2-139 0307-039 Clamp, Hose 1 2-140 0101-153 Fitting, Hose 1 2-141 0101-155 Adaptor 1 2-142 0610-018 Fitter, Trans. Oil 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-147 1401-021 Nut, 5/16" USS 1 2-148 1602-024 Pedal, Direct, Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-155 1401-030 Nut, 3/8" SAE 1 2-156 1401-020 Nut, 5/16" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-159 1916-175 Spring 1				2
2-124 0209-831 Bott, 5/16" x 5-1/4" 2 2-125 2301-020 Washer, Flat 1/4" 2 2-126 2006-077 Trans., BDU21L-310 1 2-127 1902-073 O-ring 1 2-128 2006-078 Assy., Transaxie 1 2-129 1601-004 Pad, Foot 6" x 12" 1 2-130 0215-183 Bushing, Std Pipe Thread 1 2-131 1606-069 Plug 1 2-132 0315-012 Cup, Oil Breather 1 2-133 0209-834 Boll 1 2-134 2301-296 Washer, Flat 3/16" 1 2-135 0101-154 Fitting, Hose 1 2-136 1806-145 O-ring 1 2-137 0307-039 Clamp, Hose 1 2-138 0812-067 Hose 1 2-139 0307-039 Clamp, Hose 1 2-140 0101-153 Fitting, Hose 1 2-141 0101-155 Adaptor 1 2-142 0610-018 Fitter, Trans. Oil 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-147 1401-021 Nut, 5/16" USS 1 2-148 1602-024 Pedal, Direct, Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-155 1401-030 Nut, 3/8" SAE 1 2-156 1401-020 Nut, 5/16" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-159 1916-175 Spring 1				2
2-126 2006-077				2
2-126 2006-077				2
2-128				
2-128	2-127	1902-073	O-ring	1
2-129 1601-004 Pad. Foot 6" x 12" 1 2-130 0215-183 Bushing, Std Pipe Thread 1 2-131 1606-069 Plug 1 2-132 0315-012 Cup, Oil Breather 1 2-133 0209-834 Bolt 1 2-134 2301-296 Washer, Flat 3/16" 1 2-135 0101-154 Fitting, Hose 1 2-136 1806-145 O-ring 1 2-137 0307-039 Clamp, Hose 1 2-138 0812-067 Hose 1 2-139 0307-039 Clamp, Hose 1 2-140 0101-153 Fitting, Hose 1 2-140 1011-155 Adaptor 1 2-141 0101-155 Adaptor 1 2-142 0610-018 Filter, Trans. Oil 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-155 1401-030 Nut, 3/8" SAE 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-159 1916-175 Spring 1	2-128	2006-078		1
2-130 0215-183 Bushing, Std Pipe Thread 1 2-131 1606-069 Plug 1 2-132 0315-012 Cup, Oil Breather 1 2-133 0209-834 Boll 1 2-134 2301-296 Washer, Flat 3/16" 1 2-135 0101-154 Fitting, Hose 1 2-136 1806-145 O-ring 1 2-137 0307-039 Clamp, Hose 1 2-139 0307-039 Clamp, Hose 1 2-140 0101-153 Fitting, Hose 1 2-140 0101-155 Adaptor 1 2-142 0610-018 Filter, Trans. Oil 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-155 1401-030 Nut, 3/8" SAE 1 2-155 1401-030 Nut, 3/8" SAE 1 2-156 1401-020 Nut, 3/8" SAE 1 2-157 1401-020 Nut, 3/8" SAE 1 2-158 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-158 0209-114 Bolt, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-159 1916-175 Spring 1				1
2-131 1606-069 Plug 2-132 0315-012 Cup, Oil Breather 1 02133 0209-834 Bolt 1 1 2-134 2301-296 Washer, Flat 3/16" 1 1 2-135 0101-154 Fitting, Hose 1 1 2-136 1806-145 O-ring 1 2-137 0307-039 Clamp, Hose 1 1 2-138 0812-067 Hose 1 2-139 0307-039 Clamp, Hose 1 1 2-140 0101-153 Fitting, Hose 1 1 2-141 0101-155 Adaptor 1 2-142 0610-018 Filter, Trans. Oil 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 2-149 1601-017 Pad, Hydro Pedal 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 1-159 1916-175 Spring				1
2-132 0315-012 Cup, Oil Breather 1 2-133 0209-834 Bolt 1 2-134 2301-296 Washer, Flat 3/16" 1 2-135 0101-154 Fitting, Hose 1 2-136 1806-145 O-ring 1 2-137 0307-039 Clamp, Hose 1 2-138 0812-067 Hose 1 2-140 0101-153 Fitting, Hose 1 2-140 0101-153 Fitting, Hose 1 2-141 0101-155 Adaptor 1 2-142 0610-018 Filter, Trans. Oil 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 3/8" USS 1 2-157 1401-020 Nut, 3/8" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-159 1916-175 Spring 1	2-131	1606-069		1
2-133 0209-834 Boit 1 2-134 2301-296 Washer, Flat 3/16" 1 2-135 0101-154 Fitting, Hose 1 2-136 1806-145 O-ring 1 2-137 0307-039 Clamp, Hose 1 2-138 0812-067 Hose 1 2-139 0307-039 Clamp, Hose 1 2-140 0101-153 Fitting, Hose 1 2-141 0101-155 Adaptor 1 2-142 0610-018 Filter, Trans. Oll 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-156 1401-030 Nut, 3/8" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 3/8" USS 1 2-157 1401-020 Nut, 3/8" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				1
2-134 2301-296 Washer, Flat 3/16" 1 2-135 0101-154 Fitting, Hose 1 2-136 1806-145 O-ring 1 2-137 0307-039 Clamp, Hose 1 2-138 0812-067 Hose 1 2-139 0307-039 Clamp, Hose 1 2-140 0101-153 Fitting, Hose 1 2-141 0101-155 Adaptor 1 2-142 0610-018 Filter, Trans. Oil 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-159 1916-175 Spring 1	2 133			1
2-136			Washer, Flat 3/16"	1
2-137 0307-039 Clamp, Hose 1 2-138 0812-067 Hose 1 2-139 0307-039 Clamp, Hose 1 2-140 0101-153 Fitting, Hose 1 2-141 0101-155 Adaptor 1 2-142 0610-018 Filter, Trans. Oil 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-158 0209-114 Bolt, 5/16" USS 1 2-159 1916-175 Spring 1	2-135	0101-154	Fitting, Hose	1
2-138	2-136	1806-145	O-ring	1
2-139 0307-039 Clamp, Hose 1 2-140 0101-153 Fitting, Hose 1 2-141 0101-155 Adaptor 1 2-142 0610-018 Filter, Trans. Oil 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1	2-137	0307-039	Clamp, Hose	13.
2-140 0101-153 Fitting, Hose 1 2-141 0101-155 Adaptor 1 2-142 0610-018 Filter, Trans. Oil 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1	2-138	0812-067	Hose	1
2-141 0101-155 Adaptor 1 2-142 0610-018 Filter, Trans. Oil 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct, Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1	2-139	0307-039	Clamp, Hose	
2-142 0610-018 Filter, Trans. Oll 1 2-143 1808-283 Rod, Direct Cont. 1 2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1	2-140	0101-153	Fitting, Hose	1
2-143	2-141	0101-155		1
2-144 1401-032 Nut, 3/8" SAE 1 2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-145 0502-017 End, Rod 1 2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-146 1401-020 Nut, 5/16" USS 1 2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-147 1401-021 Nut, Lock 5/16" USS 1 2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1		0502-017		
2-148 1602-024 Pedal, Direct. Control 1 2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-149 1601-017 Pad, Hydro Pedal 1 2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-150 0209-181 Bolt, 5/16" x 3-3/4" 1 2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-151 1401-032 Nut, 3/8" SAE 1 2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-152 1604-157 Pin, Switch 1 2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1			Bolt, 5/16" x 3-3/4"	
2-153 0209-350 Bolt, 3/8"-16 x 2-1/2" 1 2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-154 0100-008 Actuator, Switch 1 2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-155 1401-030 Nut, 3/8" USS 1 2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-156 1401-020 Nut, 5/16" USS 1 2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-157 1401-020 Nut, 5/16" USS 1 2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-158 0209-114 Bolt, 5/16"-18 x 1" HHX 1" NC 1 2-159 1916-175 Spring 1				
2-159 1916-175 Spring 1			Nut, 5/16" USS	
E 100				
2-160 1901-229 Screw 2				
	2-160	1901-229	Screw	2

2-161 2-162	1923-044	Switch, Dbl. Pole	
	0004 004	SWILCH, DDI. FOR	1
	2301-001	Washer, Lock 3/16"	
2 163	1401-001	Nut, 3/16" USS	2 2
2 164	0214-493	Bracket, Switch	1
2-165	2301-004	Washer, Lock 5/16"	1
2-166	1401 020	Nut, 5/16" USS	1
2-167	0209 138	Bolt, 5/16" x 2"	1
2-168	2501-027	Yoke	1
2 169	1401-020	Nut, 5/16" USS	1
2-170	1808 287	Rod	1
2-171	1604-086	Pin, Cotter 3/32" x 1/2"	1
2-172	2301-021	Washer, Flat 5/16"	1
2-173	0209-114	Bolt, 5/16"-18 x 1" HH	1
2.174		Washer, Flat 5/16"	1
2-175	0214-206	Bracket	4
	1401-030	Nut, 3/8" USS	4
2-177	2301-006	Washer, Lock 3/8"	1
2 178	0209-108	Bolt, 5/16" - 18 x 3/4" HH	1
2 179		Bolt, 5/16"-18 x 1" HH	2
	1401-016	Nut, 1/4" USS	1
2 181		Nut, 1/4" USS	1
2 182		Bolt, 1/4" x 2"	4
	1916-012	Spring	4
2-184		Nut, Lock 5/16" USS	1
2 185	0209 108	Bolt, 5/16" x 3/4" USS	1
2 186	0217-012	Brake, Locking Latch	1
2 187	1913-240	Spacer, Idler Pulley	1
2-188	2301-022	Washer, Flat 7/16" I.D. x 1" O.D.	1
2.189	2301-022	Washer, Flat 7/16" I.D. x 1 O.D.	1
	1401-020	Nut, 5/16" - 18	2
	1913-075	Spacer	
	2301-004	Washer, 5/16" Lock	2
2-193	2301-021	Washer, 5/16" Flat	2
2-194	02(9-108	Bolt, 5/16" - 18 x 3/4"	2
2-195	1906-022	Shield, Air Deflector RH	1
2-196	0209-108	Bolt, 5/16" - 18 x 3/4"	1
2 197	2301-021	Washer, 5/16" Flat	1
2 198	2301-004	Washer, 5/16" Lock	1
2-199	1401-021	Nut, 5/16" - 18	1
2-200	1401-021	Nut, 5/16" - 18	1
2-201	2301-004	Washer, 5/16" Lock	1
2-202	2301-021	Washer, 5/16" Lock	1
2-203	0209 108	Bolt, 5/16" - 18 x 3/4"	1
2-204	1401-021	Nut, 5/16" - 18	2 2
2-205	2301-004	Washer, 5/16" Lock	2
2-206	1906-023	Shield, Air Deflector LH	1
2-207	2301-021	Washer, 5/16" Flat	2
2-208	0209-108	Bolt, 5/16" - 18 x 3/4"	2

KEY	PART NUMBER	DESCRIPTION	QTY.
3-1	E-260	Engine Kubota D722	1
3.2	P/O ITEM 3-1	Clamp	1
3-3	P/O ITEM 3-1	Hose	1
3-4	P/O ITEM 3-1	Clamp	1
3-5	0209-161	Bolt, 5/16" x 3"	1
3-6	2301-021	Washer, 5/16" Flat	1
3-7	P/O ITEM 3-1	Fuel Filter	1
3-8	1401-020	Nut, 5/16" USS	1
3-9	2301-004	Washer, 5/16' Lock	1
3-10	0214-187	Bracket, Engine-Radiator	1
3-11	P/O ITEM 3-1	Clamp	1
3-12	P/O ITEM 3-1	Clamp	1
3-13	P/O ITEM 3-1	Hose	1
3-14	0209-138	Bolt, 5/16" x 2"	1
3-15	2301-004	Washer, 5/16" Lock	1
3-16	1401-020	Nut, 5/16" USS	4
3-17	1401-020	Nut, 5/16" USS	1
3-18	2301-004	Washer, 5/16" Lock	1
3-19	2301-021	Washer, 5/16" Flat	1
3-20	1929-004	Shock, Spacer Muffler	1
3-21	1929-004	Shock, Spacer Muffler	1
3-22	1929-004	Shock, Spacer Muffler	4
3-23	1304-028	Muffler	1
3-24	1929-004	Shock, Spacer Muffler	1
3-25	2301-021	Washer, 5/16" Flat	1
3-26	0209-150	Bolt, 5/16"-18 x 2-1/2"	1
3-27	0209-831	Bolt, 8MM-1.25 Pitch x 24MM	2
3-28	2301-004	Washer, 5/16" Lock	2
3-29	0209-120	Bolt, 5/16" x 1-1/4"	3
3-30	0314-004	Cover, Engine Flywheel	1
3-31	2301-004	Washer, 5/16" Lock	3
3-32	1401-020	Nut, 5/16" USS	3
3-33	0214-186	Bracket, Engine Radiator	1
3-34	P/O ITEM 3-1	Voltage Regulator	1
3-35	P/O ITEM 3-1	Bolt	2
3-36	0301-140-001	Cap, Battery Black	1
3-37	0301-140	Cable, Battery Black	1
3-38	0301-142-001	Cap, Battery Red	1
3-39	0301-142	Cable, Battery Red	1
3-40	P/O ITEM 3-1	Washer	2
3-41	P/O ITEM 3-1	Nut	2
3-42	0214-188	Bracket	1
3-43	0314-032	Screen, Radiator	1
3-44	P/O ITEM 3-1	Washer, Flat	2
3-45	0209-834	Bolt, 6mm x 9/16"	4
3-46	2301-001	Washer, 3/16" Lock	4
3-47	0214-499	Bracket, Rad. Screen Mtg.	1
3-48	0201-501	Bracket, Rad. Screen Mtg. L.H.	1
3-49	0214-499	Bracket, Rad. Screen Mtg.	1
3-50	0214-500	Bracket, Rad. Screen Mtg. R.H.	1

KEY	PART NUMBER	DESCRIPTION	QTY.
4-1	P/O ITEM 4-2	Bolt	2
4-2	1923-049	Solenoid, Fuel	2
4-3	0214-184	Bracket, Motor Mount L/H Rear	2 2 2
4.4	2301-031	Washer, 7/16" Flat	1
4.5	0209-839	Bolt, Mertic 10 x 25	12
4-6	0214-183	Bracket, Motor Mount L/H Front	12
4-7	P/O ITEM 4-2	Bracket	1
4-8	P/O ITEM 4-2	Washer	
4-9	P/O ITEM 4-2	Nut	2 2 3
4-10	P/O ITEM 4-2	Washer	3
4-11	P/O ITEM 4-2	Bolt	3
4-12	P/O ITEM 3-1	Cap	1
4-13	P/O ITEM 3-1	Bolt	1
4 14	P/O ITEM 3-1	Clamp	4
4-15	P/O ITEM 3-1	Nut	1
4-16	P/O ITEM 3-1	Wing Nut	1
4-17	P/O ITEM 3-1	Inner Cap	1
4-18	P/O ITEM 3-1	Cap	1
4 19	P/O ITEM 3-1	Filter Element	1
4.20	P/O ITEM 3-1	Air Cleaner	1
4-21	P/O ITEM 3-1	Clamp	1
4-22	P/O ITEM 3-1	Hose	1
4-23	P/O ITEM 3-1	Clamp	1
4-24	1901-011	Screw, Set 5/16" x 5/16"	1
4-25	1102-028	Key, 1/4" x 1/4" x 1-1/2"	1
4-26	1608-129	Pulley, Engine	1
4-27	1901-011	Screw, Set 5/16" x 5/16"	1
4-28	1929-001	Shock, Spacer	4
4-29	0214-183	Bracket, Motor Mount	2
4-30	2301-008	Washer, 1/2" Lock	4
4-31	1401 054	Nut, 1/2"-20	4
4-32	0214-184	Bracket Motor Mount	2
4-33	1401-054	Nut, 1/2"-20	1
4-34	2301-008	Washer, 1/2" Lock	1
4 35	1929-001	Shock Spacer	1
4-36	2301-335	Washer, 1/2" x 1-3/4" Flat	1
4-37	0209-534	Bolt, 1/2" x 2-3/4"	1
4-38	P/O ITEM 3-1	Bolt	1
4-39	P/O ITEM 3-1	Rubber Insert	1
4-40	P/O ITEM 3-1	Clamp	1
4-41	P/O ITEM 3-1	Washer	1
4-42	P/O ITEM 3-1	Nut	4
4-43	1401-010	Nut. 1/4" USS	1
4-44	2301-003	Washer, 1/4" Lock	1
4-45	0209-114	Bolt, 5/16" x 1"	2
4-46	0209-534	Bolt, 1/2" x 2 3/4" SAE	4
4-47	P/O ITEM 3-1	Washer, Flat	2
4-48	P/O ITEM 3-1	Washer, Lock	2
4-49	P/O ITEM 3-1	Bolt	2
4-43	170 HEMO	List	_


KEY	PART NUMBER	DESCRIPTION	QTY
4-50	1401-020	Nut, 5/16" Lock	4
4-51	2301-004	Washer, 5/16" Lock	1
4-52	1923-007	Solenoid	1
4-53	2301-004	Washer, 5/16" Lock	1
4-54	1401-020	Nut, 5/16" Lock	1
4-55	1401-197	Nut, Brass	4
4-56	2301-001	Washer, 3/16" Lock	1
4-57	2301-020	Washer, 1/4' Flat	2
4-58	0209-021	Bolt, 1/4" x 3/4"	- Marin
4-59	0209-032	Bolt, 1/4" x 1"	2
4-60	0214-189	Bracket, Tank Mount R.H.	1
4-61	0209-114	Bolt, 5/16" x 1"	4
4-62	1401-020	Nut, 5/16" USS	1
4-63	2301-004	Washer, 5/16" Lock	4
4-64	0301-035	Cable, Relief Valve	
4-65	1918-022	Strap, tank Mount	1
4-66	2301-003	Washer, 1/4" lock	2
4-67	1401-010	Nut, 1/4" USS	2 2
4-68	1811-004	Grommet, Rubber	-
4-69	2001-026	Tank, Fuel	1
4-70	0307-026	Clamp, Hose	-
4-71	0812-078	Hose, Fuel Line 48" Long	
4-72	0307-026	Clamp Hose	1
4-73	0213-008	Brace, Fuel Tank	1
4-74	2301-006	Washer, 3/8" Lock	2
4-75	1401-030	Nut, 3/8" USS	1
4-76	2301-004	Washer, 5/16" Lock	2
4-77	1401-020	Nut, 5/16" USS	4
4-78	0209-835	Bolt, 5/16"-18 x 2"	4
4.79	2301-004	Washer, 5/16" Lock	4
4-80	1401-020	Nut, 5/16" USS	
4-81	0307-026	Clamp, Hose	4
4-82	0812-079	Hose, Fuel Line 36" Long	
4-83	0307-026	Clamp, Hose	
4-84	1918-022	Strap, Tank Mount	1
4-85	P/O ITEM 3-1	Tank, Over Flow	1
4-86	0314-031	Cover, Radiator	-
4-87	2301-335	Washer, 1/2" x 1-3/4" Flat	1
4-88	1937-002	Sender, Temperature	4
4-89	P/O ITEM 4-90	Bolt	4
4-90	0307-042	Clamp, Throttle Cont. Inner Wire	4
4-91	0307-043	Clamp, Throttle Cont. Conduit	4
4-92	2301-021	Washer, 5/'16" Flat	4
4-93	P/O ITEM 4-2	Pin	4
4-94	P/O Item 3-1	Light Cover Preheat	4
4-95	P/O ITEM 3-1	Bolt	4
4-96	P/O ITEM 3-1	Washer	4
4-97	0203-001	Light Temperture Warning	4
4-98	P/O Item 4-97	Washer	4
- 00	1/0 110111 4:37	Tradital	1


KEY	PART NUMBER	DESCRIPTION	QTY.
7-1	1913-283	Spacer, Transmission	1
7-2	1806-144	Ring, Snap	1
7-3	0702-148	Gear, Mitre	1
7-4	0204-040	Bearing, Ball	1
7-5	1913-268	Spacer, Transaxle	1
7-6	0702-147	Gear, Mitre	1
7-7	1904-154	Shaft, Internal Drive	1
7-8	0702-057	Gear, Transmission	1
7-9	0204-040	Bearing, Ball	1
7-10	0315-012	Cup, Oil Breather	1
7-11	1904-154	Shaft, Internal Drive	
7-12	0204-040	Bearing, Ball	4
7-13	0702-053	Gear, Transmission	1
7-14	1913-268	Spacer, Transaxle	1
7-15	0702-052	Gear, Transmission	4
7-16	1913-269	Spacer, Transaxle	1
7-17	0204-040	Bearing, Ball	
7-18	0304-158	Case, Half Deep	4
7-19	0701-022	Gasket	4
7-20	0806-336	Housing, Axle	1
7-21	0209-307	Bolt, 3/8" x 3/4" NC	6
7-22	2301-006	Washer, Lock 3/8"	6
7-23	1102-013	Key, Woodruff	1
7-24	1606-070	Plug, Drain	4
7-25	0103-112	Axle, Short	- 1
7-26	0204-039	Bearing, Differential	
7-27	0702-054	Gear, Transmission	4
7-28	2301-006	Washer, Lock 3/8"	2
7-29	0209-318	Bolt, 3/8" x 1" NF HE	2 2
7-30	1913-034	Spacer, Differential	-
7-31	0204-039	Bearing, Differential	1
7-32	0304-156	Case, Half Shallow	4
7-33	0209-120	Bolt, 5/16" x 1"	17
7-34	0701-022	Gasket	1/
7-35	0806-091	Housing, Axie Long	4
7-36	2301-006	Washer, Lock 3/8"	6
7-37	0209-307	Bolt, 3/8" x 3/4" NC	6
7-38	0403-003	Differential	1
7-39	1401-071	Nut, Full 5/8" SAE	10
7-40	2301-096	Washer, Cut 5/8"	
7-41			10
7-42	1806-001	O-ring, 1/4" x 1"	2
7-43	0807-036	Hub Drive Wheel	2
	1902-012	Seal, Axle	2
7-44	1902-012	Seal, Axle	2 2 2 2 2 2
7-45	1207-025	Ring, Lock	2
7-46	0204-038	Bearing, Axle	2
7-47	1102-013	Key, Woodruff	1
7-48	0103-090	Axle, Long	1 1 1
7-49	0701-103	Gasket, Case	1


KEY	PART NUMBER	DESCRIPTION	QTY
4.99	P/O Item 4-97	Nut	1
4-100	1401-299	Nut, 10 - 24 Center Lock	1
4-101	1401-299	Nut, 10 -24 Center Lock	1
4-102	0212-003	Bolt, Eye 3/16" x 2"	1
4-103	0214-195	Bracket, Hood Hinge Mounting	1
4-104	0309-053	Clip, Push Round 1/4" ID	1
4 105	2301-020	Washer, 1/4" Flat	1
4-106	1808-305	Rod, Hood Prop	1
4-107	1401-203	Nut, Wing	1
4-108	2301-020	Washer, 5/16" Flat	1
KEY	PART NUMBER	DESCRIPTION	QTY
5.1	1201-095	Assy., Park Br. Lever	2
5-2	1906-015	Shield, Dust	2
	1901-216	Assy., Adj. Screw Nut	22222222
	1916-145	Spring, Adj Screw (blue)	2
	1908-013	Assy. Shoe and Lining	2
	1908-012	Assy., Shoe and Lining	2
	1604-133	Retainer, Lever Pin	2
	1916-144	Spring, Shoe Ret. (RH) Red	2
	1604-133	Retainer, Lever Pin	2
5 10	1916-143	Spring, Shoe Ret.(LH) Gm.	2
5-11	1935 003	Torque Spider, Finished	2
5 12	1401-020	Nul, 5/16" USS	8
5-13	2301-004	Washer, Lock 5/16"	8
5-14	0209-120	Bolt, 5/16" x 1-1/4"	8
		FIGURE KEY NUMBER INDEX	
KEY	PART NUMBER	DESCRIPTION	QTY.
6-1	0401-136	Decal, Brake	1
6-2	0401-368	Decal, Instr. Panel Lower	7
6.3	0401-386	Decal, Instr. Panel	1
6-4	0401-358	Decal, Gasoline	1
6-5	0401-375	Decal, Rot. Driveline (Weasler)	1
6-6	0401-111	Decal, Danger Blade	2
6-7	0401-221	Decal, ANSI B71.4 Std.	1
6-8	0401-110	Decal, Chute Guard	1
6-9	0401-367	Decal, Grd. Spd. Cont.	1
6-10	0401-383	Decal, Hydrostatic 20 HP Gasoline	1
6-11	P/O ITEM 3-1	Decal, Caution Not Use Ether	1
6-12	P/O ITEM 3-1	Decal, Caution Antifreeze	1
6-13	P/O ITEM 3-1	Decal, Precaution Radiator	1
6-14	0401-384	Decal, Danger Rotating Blade	2
6-15	0401-385	Decal, Danger Guards	2
6-16	0401-393	Decal, Caution Radiator Screen	1

ILLUSTRATED PARTS LISTING FIGURE KEY NUMBER INDEX

KEY	PART NUMBER	DESCRIPTION	QTY
7-50	2301-004	Washer, Lock 5/16"	17
7-51	1401-020	Nut, 5/16" USS	17
7-52	1401-128	Nut, Conduit 1/2"	1
7-53	0215-183	Bushing	1
7-54	1606-069	Plug	1
7-55	0204-159	Bearing, Ball	1

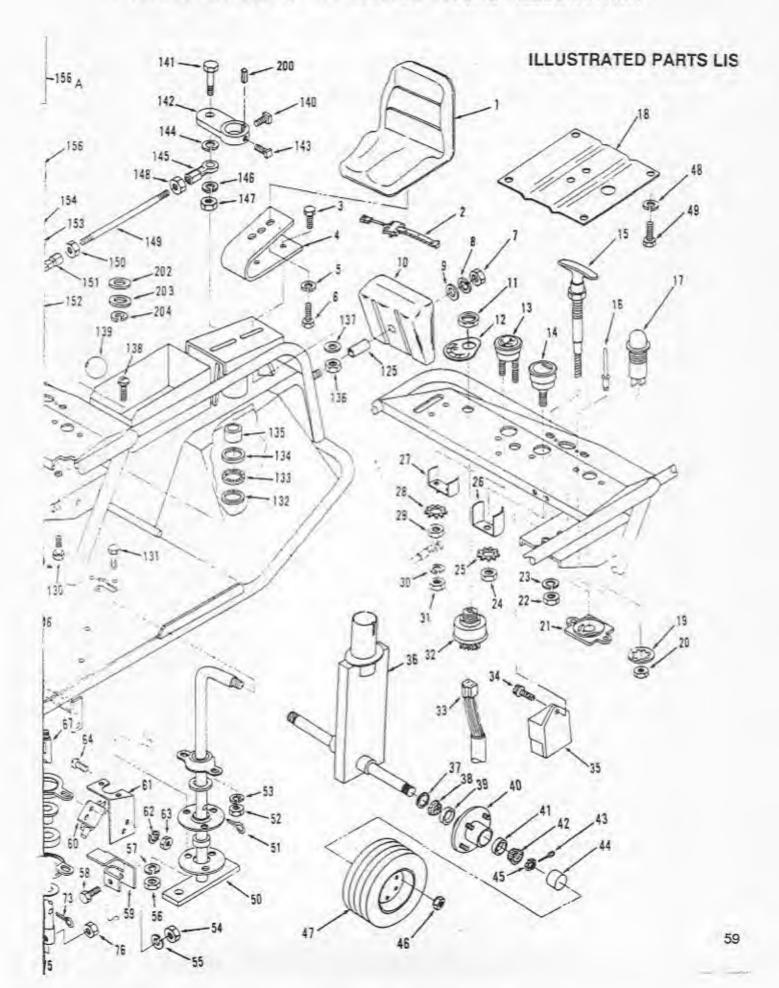

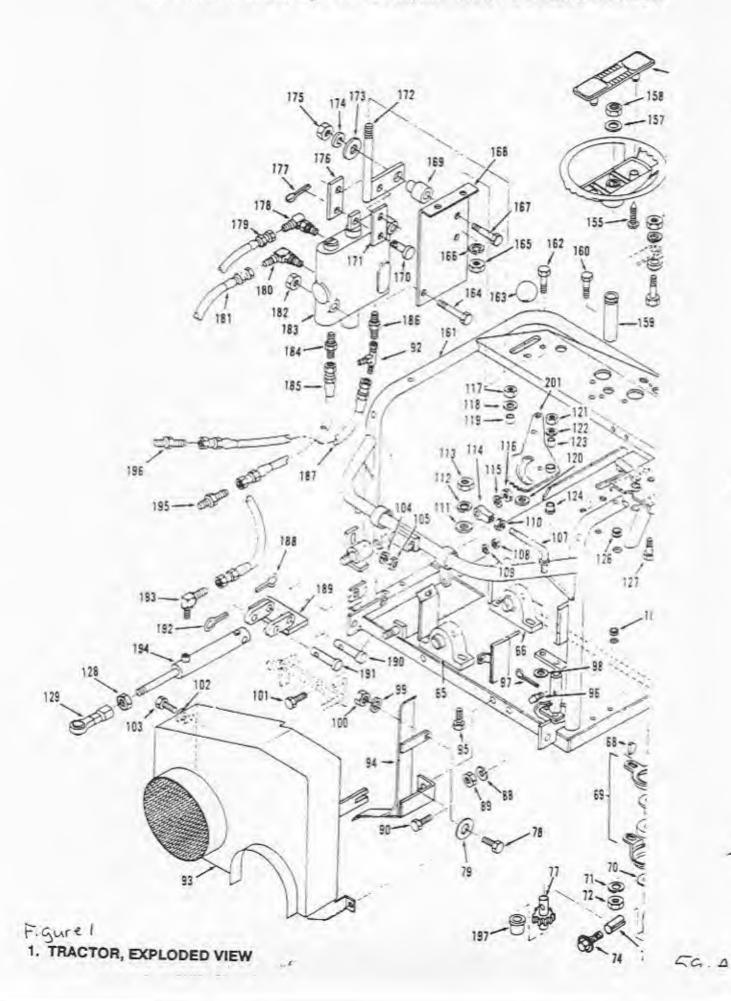

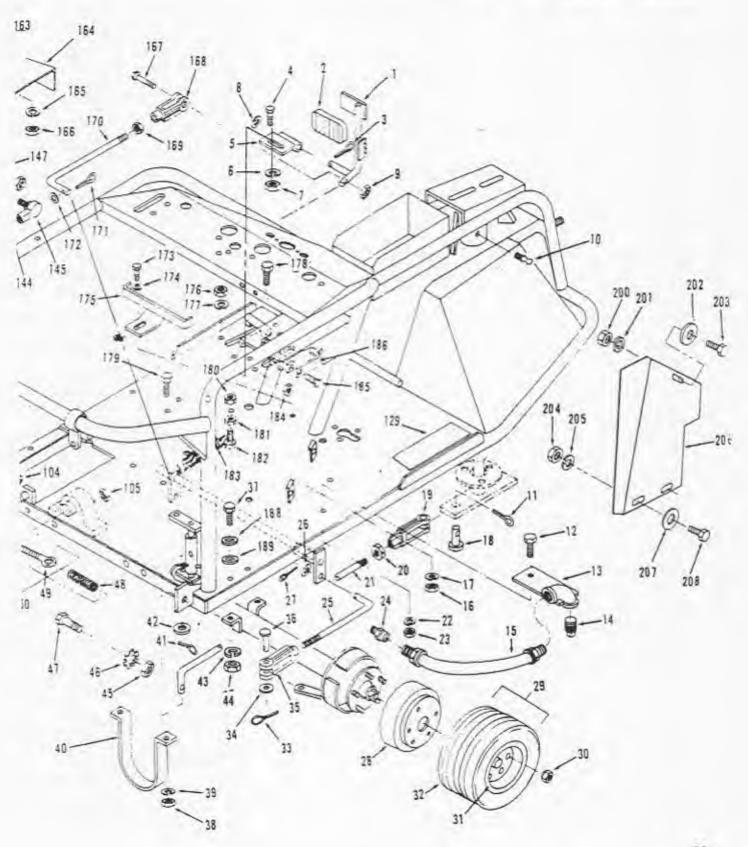

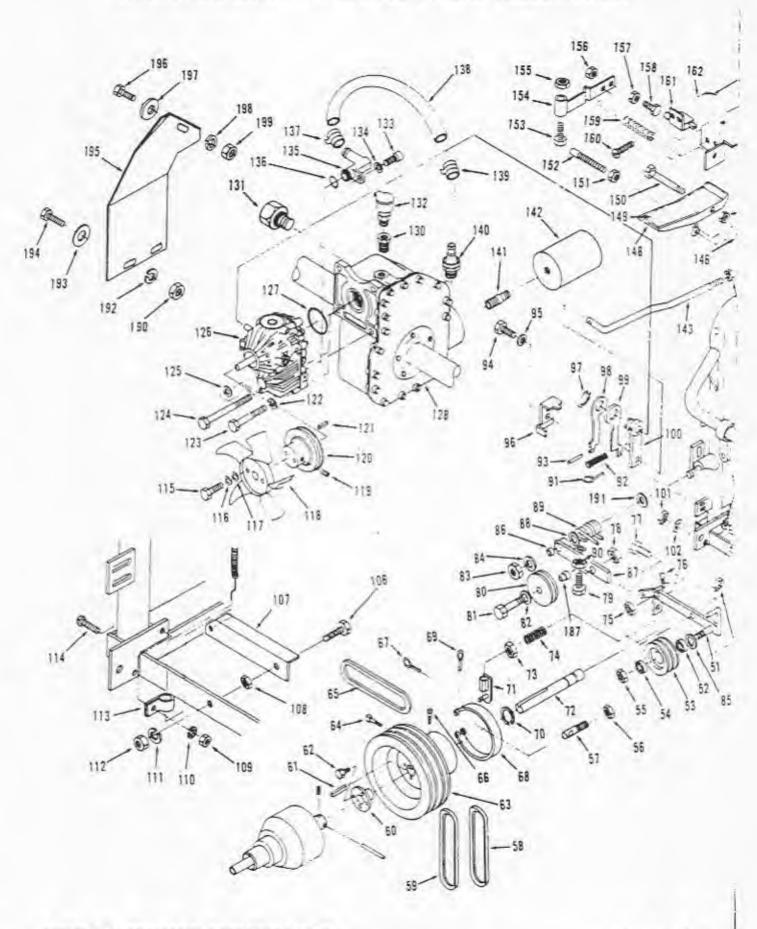


FIGURE 2. TRACTOR, EXPLODED VIEW

62 60-A

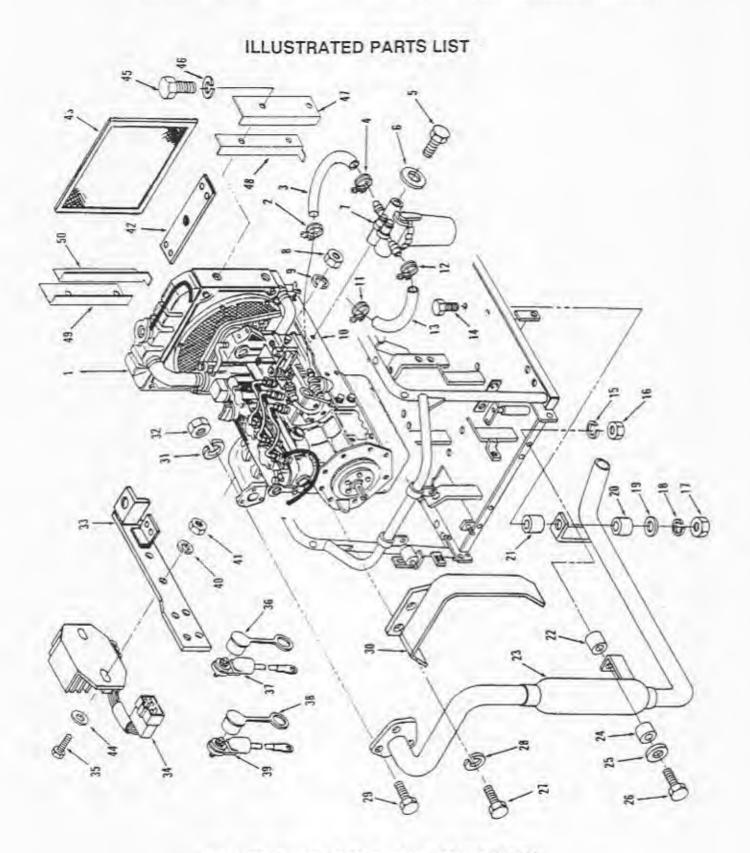
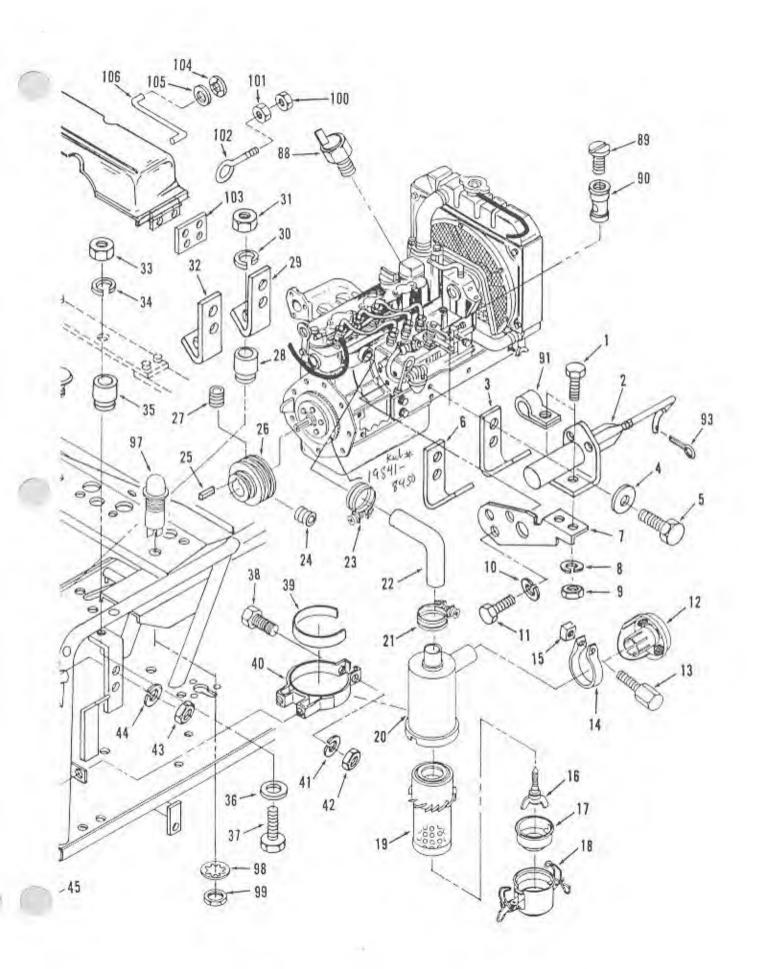


FIGURE 3. TRACTOR, EXPLODED VIEW

23



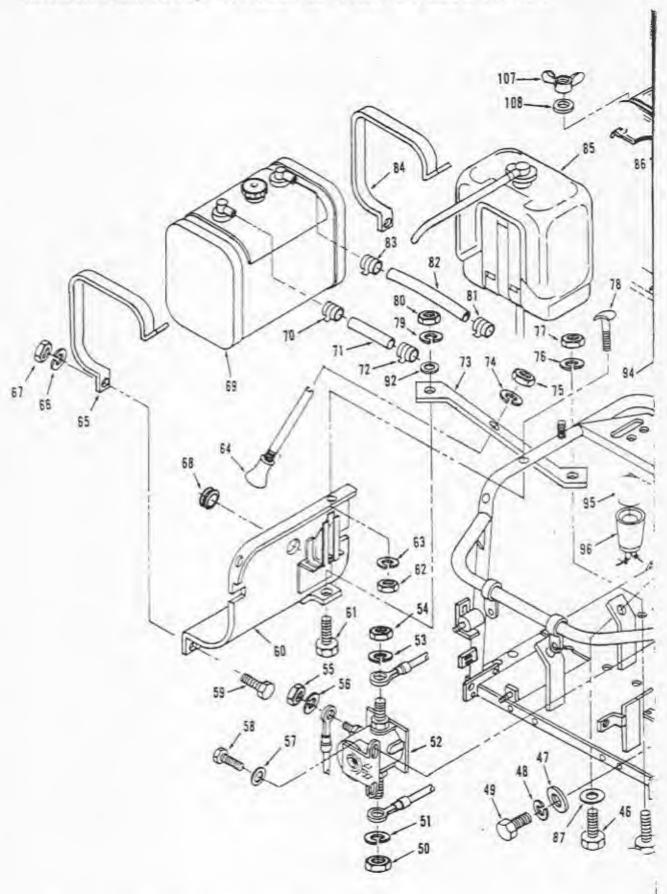


FIGURE 4. TRACTOR, EXPLODED VIEW

63-A

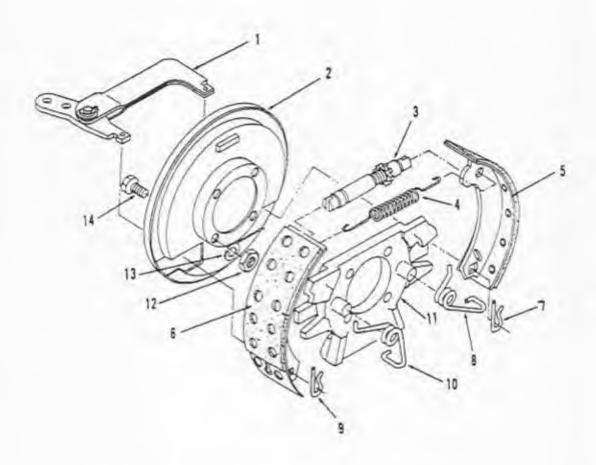


FIGURE 5. BRAKE ASSEMBLY, EXPLODED VIEW

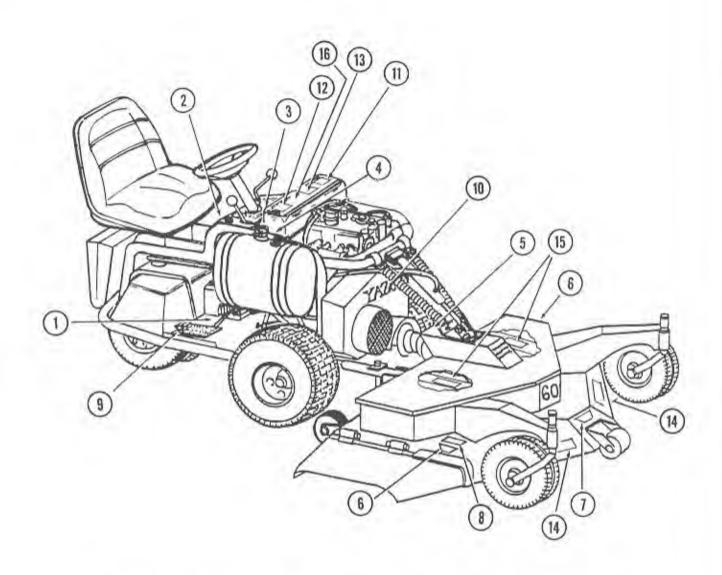


FIGURE 6. WARNING AND CAUTION DECAL PLACEMENT


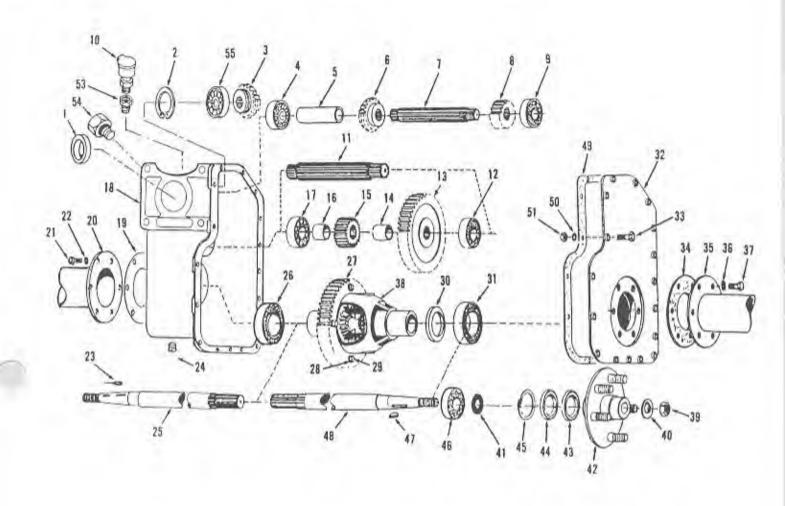


FIGURE 7. HYDROSTATIC DIFFERENTIAL, EXPLODED VIEW

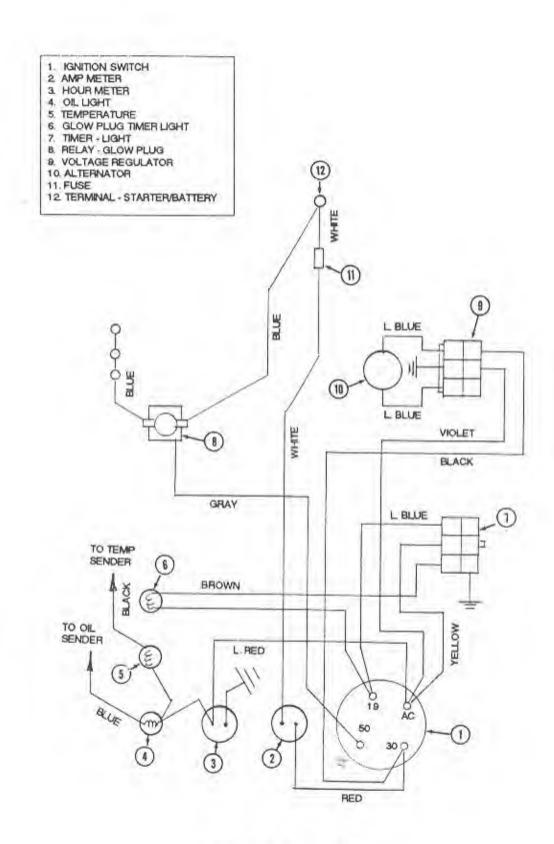

WIRING DIAGRAM